

INSTRUCTIONS FOR AIR CONDITIONING AND HEATING

When you arrive the air conditioning and heating should have been switched off by the previous occupant. The Master panel is in the sitting room on the left wall near the kitchen.

The display should be:



In summer for Air Conditioning

To activate press STOP



Then press this air conditioning symbol on right hand side.



Then press power symbol



Then adjust the temperature to your requirements.



In winter for heating

To activate press STOP



Then press this heating symbol on right hand side.



Then press power symbol




Then adjust the temperature to your requirements.




Night Time in Summer and Winter - Quiet Mode

Night Time – The system has a quiet mode.

Press air zone at bottom

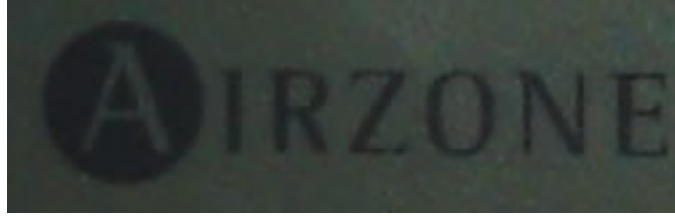

Then press the moon.

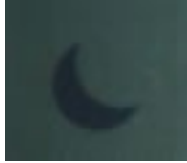

Each bedroom room has its own temperature controller and night mode function as well.

Same process, on individual panels you can turn it off, or set the night time mode in exactly the same way as above on the panels in the bedrooms.

MANUAL versus AUTO mode.

When running the air conditioning or heating, please leave it on manual mode setting with the hand symbol.



Please leave the AUTO mode alone, this is for programming various times of the day for the system to switch on and off, so for simplicity for clients, we suggest using the manual mode which matches the temperature you set automatically. Thank you.

Leaving the apartment on your last day, how to switch it off.

When leave go to the Master panel and tap the top right of screen.

Press the STOP symbol



Then press the Power button symbol



The screen should just show STOP and Air zone.

